




# TRIM BOARDS & CLASSIC AMERICAN MOLDINGS

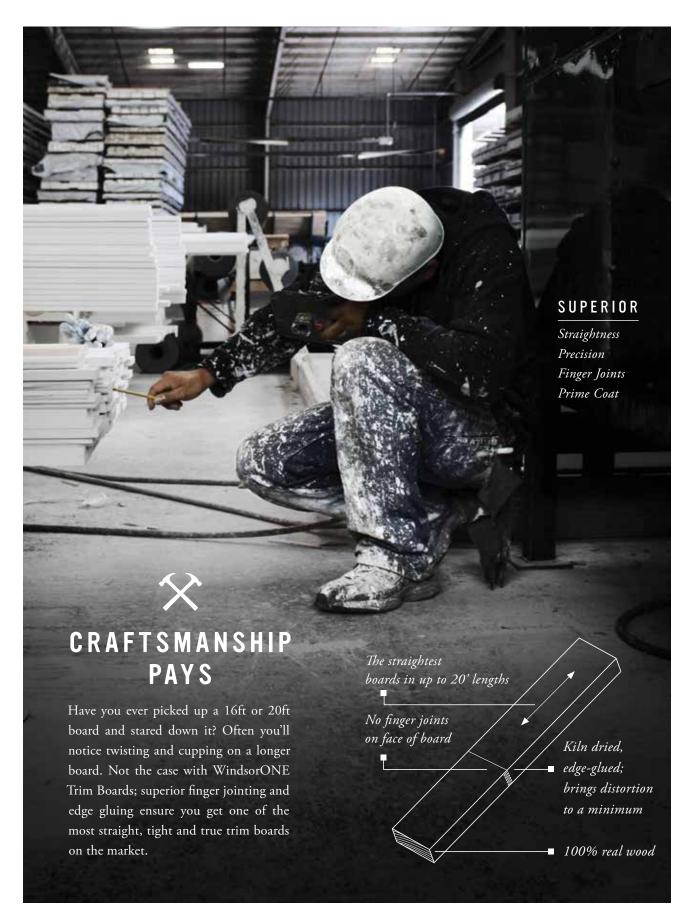



# 2 TYPES OF BOARDS Check the Ink Stamp to tell the difference



### ALL WINDSORONE BOARDS ARE STRAIGHT TIGHT & TRUE

Boards are made of real wood, finger jointed and coated with three coats of acrylic latex primer. WindsorONE Traditional Boards can be used for both interior and exterior use. The back of all WindsorONE Traditional boards contain an ink stamp ("WindsorONE Traditional") to be easily identified.

WindsorONE Traditional 188 & MANUFACTURED IN THE USA



### 30 YEAR WARRANTY\* PROTECTS AGAINST ROT, INSECTS AND MOLD

Boards are made of real wood, finger jointed and coated with three coats of acrylic latex primer. All boards are protected with a 30 year warranty against rot, insects & mold. WindsorONE Protected Boards can be used for both interior and exterior use. The back of all WindsorONE Protected boards contain an ink stamp ("WindsorONE Protected") to be easily identified.

Windsor ONE+Protected ## MANUFACTURED IN THE USA

# CLASSIC AMERICAN MOLDING COLLECTION:

CLASSICAL COLONIAL

1725-1820 Inspired GREEK REVIVAL

1820-1840 Inspired



















Classical Colonial Components

		-	
	BASE	WOBM001	$1^3/_{16}$ "x $7^1/_4$ "
	CASING	WOCS001	$^{3}/_{4}$ " x $5^{1}/_{2}$ "
$\Box$	BACK BAND	WOBB001	$^{7}/_{8}$ " x $1^{3}/_{4}$ "
_	CHAIR RAIL	WOCH001	$1^{5}/_{8}$ " x $2^{1}/_{4}$ "
	CROWN	WOCM003	$1^{5}/_{8}$ " x 4"
	CROWN	WOCM002	$^{3}/_{4}$ "x $^{45}/_{16}$ "
$ \simeq  $	CROWN	WOCM001	$^{3}/_{4}$ " x $3^{19}/_{32}$ "

Greek Revival Components

	BASE	WOBM002	$^{3}/_{4}$ " x $5^{1}/_{2}$ "
	CASING	WOCS007	$^{3}/_{4}$ " x $3^{1}/_{2}$ "
	COVE	WOCV001	$\frac{3}{4}$ " $x^{7}/8$ "
$\triangle$	BAND MOLD	WOBB002	$^{3}/_{4}$ " $^{3}/_{4}$ "
	STOOL	WOWS001	$1^{1}/_{16}$ " x $4^{1}/_{2}$ "
$\bigcirc$	CROWN	WOCM004	$1^{1}/_{16}$ " x 4"

# FOUR FLOOR TO CEILING STYLES

CLASSICAL CRAFTSMAN

1900-1930 Inspired COLONIAL REVIVAL

1920-1940 Inspired















Classical Craftsman Components

Д	BASE SHOE	WOBS001	$^{1}/_{2}$ " $^{3}/_{4}$ "
	BASE	WOBM003	$^{3}/_{4}$ "x $7^{1}/_{4}$ "
	PLINTH	WOPB001	$1^{3}/_{8}$ " x 8"
	APRON	WOCS004	$^{3}/_{4}$ "x $3^{9}/_{16}$ "
	COVE	WOCV001	$^{3}/_{4}$ " $_{x}^{7}/_{8}$ "
	STOOL	WOWS002	$1^{1}/_{16}$ "x $4^{1}/_{4}$ "
	CASING	WOCS003	$^{3}/_{4}$ " x $^{4}/_{4}$ "
	HEADER CAP	WOHC001	$1^{5}/_{16}$ "x $2^{1}/_{4}$ "
	STOP	WOST001	$^{7}/_{16}$ "x $1^{1}/_{16}$ "
$\subseteq$	PICTURE	WOPM004	$^{3}/_{4}$ " x $1^{3}/_{4}$ "
	CROWN	WOCM005	$^{3}/_{4}$ " x $^{49}/_{16}$ "

Colonial Revival Components


		-	
۵	BASE SHOE	WOBS001	$^{1}/_{2}$ " $^{3}/_{4}$ "
	BASE	WOBM004	$^{3}/_{4}$ "x $^{7}1/_{4}$ "
	APRON	WOCS006	$^{3}/_{4}$ "x $3^{9}/_{16}$ "
	STOOL	WOWS001	$1^{1}/_{16}$ " x $4^{1}/_{2}$ "
	CASING	WOCS005	$1^{3}/_{16}$ " x $4^{3}/_{8}$ "
	PICTURE	WOPM004	$^{3}/_{4}$ " x $1^{3}/_{4}$ "
	CROWN	WOCM006	$^{3}/_{4}$ "x $4^{9}/_{16}$ "
	STOP	WOST004	$^{1}/_{2}$ " x $1^{7}/_{8}$ "

# STOCKING INVENTORY


Stocking products featured in red.

## **PROTECTED** S4SSE

TRIM BOARDS smooth surface four sides

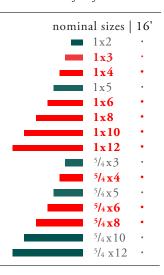

### **PROTECTED** EXT. MOLDINGS



### **PROTECTED** SHIPLAP\*\*



\*\*Not to be confused with WindsorONE Pre-gapped Nickel Gap Boards, see opp. pg.


# **PROTECTED S1S2E**

TRIM BOARDS

reversible rough sawn on one side, smooth on others with eased edges



### **PROTECTED TONGUE & GROOVE**

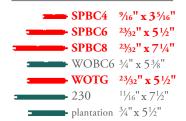





### 1 PROTECTED TO THE CORE; FULL PENETRATION

Because unlike the other guys, we're assuming you'll actually want to cut the material at some point.



PROTECTED AGAINST ROT, INSECTS & MOLD

Does not protect against your mother-in-law, hangovers, airport security, etc.



**DURABLE FOR EXTERIOR & SAFE FOR INTERIOR** 

Gold Indoor Air Quality Rating, low VOC's and California Hippie Approved.



WEATHER RESISTANT SYSTEM (WRS™)

Water is for drinking, not trim boards.



<sup>5</sup> MINIMIZES THE NATURAL TENDENCY TO DISTORT Unlike the explanation your 16 yr old told you about how the family car ended up in the pond out on Rte 1.



6 NO KNOTS; YOUR BOARDS ARE ALWAYS CLEAR

Imagine that, you can actually use every foot you pay for.



7 PROTECTION NOT DIMINISHED

By shaping, planing, sanding, fastening or molding (actual use does not void the warranty).



8 THE CUT SURFACES ONLY NEED PRIMING

No need to also apply special protection (we took care of that for you).



9 BACKED BY A 30-YEAR LIMITED\* WARRANTY

The "limitation" is you have to install it correctly (for one example see #8 again).



10 BUILD AMERICA: MANUFACTURED IN THE U.S.A.

Because everything else you bought was made in China.

### INSTALLATION REMINDERS\*



### PRIME ALL CUTS!

MOISTURE CONTROL¹: Acclimate to the environment. For interior trim, store inside the structure until the products reach approx 8% moisture content. For exterior trim, store in locations such as a garage that is not heated & is well ventilated until about 14% moisture content. Do not install exterior trim boards with a moisture content over 18%. 1see www.windsorone.com/moisturecontrol



KEEP MATERIAL COVERED: Store on stringers and out of the weather.



INSTALL 6" ABOVE GRADE: Trim should be installed always at least 6" from ground.

INSTALL 2" ABOVE ROOF: 2" breaks are crucial on the roof and flat surfaces (porches, decks, etc).

1/4" FROM FLASHING: Flashing is imperative; and always maintain a 1/4" gap for a capillary break.



\*SEE FULL INSTALLATION INSTRUCTIONS. WindsorONE should be stored, installed, handled & maintained correctly for the best performance. For complete installation guidelines & the WindsorONE Protected warranty, visit WindsorONE.com/install or call 888.229.7900.





### **BUILD AMERICA**

Manufactured in the U.S.A., craftsmanship from Willits, CA & Surry, VA.

### **TRADITIONAL** MOLDINGS

### — C A S I N G S —

WOCS001 3/4" x 5 1/2"

**■ WOCS003** 3/4" x 41/4"

**WOCS007** 3/4" x 3 1/2"

### -CROWNS-

**SOURCE** WOCM001 3/4" x 3 19/32"

₩OCM004 11/16" x 4" **⇒ WOCM005** 3/4" x 49/16"

→ WOCM006 ¾" x 4½"



### **HEALTH STARTS AT HOME**

Gold Indoor Air Quality Rating with a 30 yr warranty against rot, insects and mold.

### - DETAIL -

₹ WOSP001 7/8" x 1 1/4" **WOPM004** 3/4" x 13/4"

□ WOST001 7/16" x 1 1/16"

¬ WOCV001 ¾" x ¾"

△ WOBS001 ½" x ¾" ✓ WOBB001 7/8" x 13/4"

△ WOBB002 ¾" x ¾"

### - APRONS -

□ WOCS004 3/4" x 3%16"

■ WOCS006 <sup>3</sup>/<sub>4</sub>" x 3 <sup>9</sup>/<sub>16</sub>" **■ WOCS007** 3/4" x 3 1/2"

- STOOLS -----

**→ WOWS001** 1½6" x 4½" **■ WOWS002** 1½6" x 4½"



### CRAFTSMANSHIP PAYS

Show off the detail work on your projects and generate more referrals.

### - CAPS -

**▼ WOHC001** 15/16" x 21/4" WOWC002 11/8" x 3"

WOWC003 13/8" x 13/4"

WOWC006 15/8" x 25/8"

### BASES —

∠ WOBM001 13/16" x 7 1/4" ∠ WOBM002 3/4" x 5 1/2"

**■ WOBM003** 3/4" x 7 1/4"

⇒ WOBM004 ¾" x 7 ¼"

**□** WOPB001 1¾" x 8"

### -SPECIALTY —

∠ WOCH001 15%" x 21/4"

☐ WOCM002 3/4" x 45/16"

WOCM003 15/8" x 4"

# Stocking products in red.

### **TRADITIONAL** S4SSE TRIM BOARDS

smooth surface four sides

nominal sizes 12' 16'

□ 1x2

\_\_\_\_1x3

¬ 1x4 □ 1x5

¬ 1x8 1x10

5/4 x 3 ¬ 5/4 x 4

**⁻⁵/4x6** 

 $7^{5/4} \times 10$ 

 $\frac{5}{4} \times 12$ 

### **TRADITIONAL** TONGUE & GROOVE

%16" x 35/16" SPBC4

<sup>23</sup>/<sub>32</sub>" x 5 ½" SPBC6

⇒ SPBC8 <sup>23</sup>/<sub>32</sub>" x 7 <sup>1</sup>/<sub>4</sub>"

⇒ WOBC6 3/4" x 53/8"

→ WOTG 23/32" x 5 1/2"

### **TRADITIONAL BEADED CASING**

**WOCS007** 3/4" x 3 1/2"

**WOCS008** 3/4" x 4 1/4"

**■ WOCS009** 3/4" x 5 1/4"

── WOCS010 3/4" x 3 1/2"

### TRADITIONAL NICKEL GAP\*

**→ WOSN6** ¾" x 5½" **₩OSN8** ¾" x 71/4"

\*Not to be confused with WindsorONE Shiplap Boards, see opp. page



### MORE INFORMATION?

call 330.875.7535 or visit www.parksite.com

All statements made on or in goods, labels, brochures, advertising and specifications are made solely by the product manufacturers, and not by Parksite, and Parksite does not endorse or approve of those statements. Parksite expressly disclaims all express or implied warranties, including but not limited to any implied warranties of merchantability, fitness for a particular purpose or freedom from infringement.